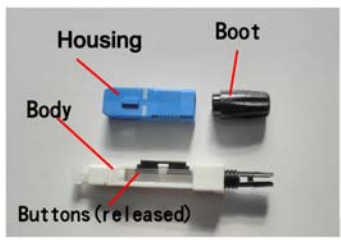
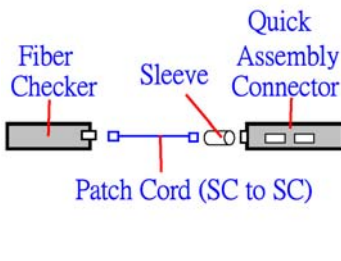
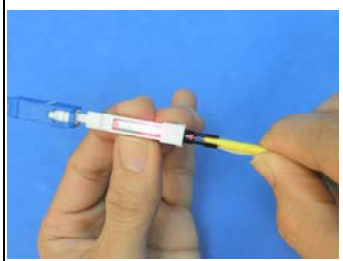
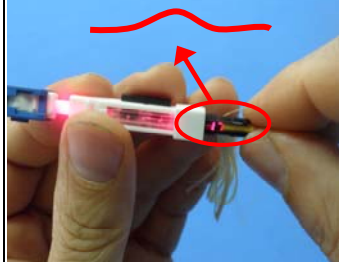
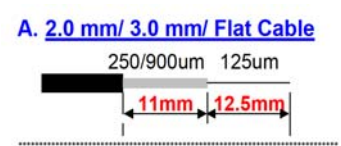

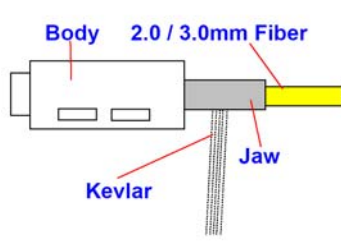


Quick Assembly Connector (No Tool) – 2.0mm/3.0mm/Flat Cable User's Manual

Rev. 2011B

A. Instruction for SC - 2.0 mm / 3.0mm / Flat Cable

You may set Fiber Checker for the best result. If you don't have it, please skip [Step 1](#) & [Step 8](#).

	< Drawing > Major components. *Please confirm buttons are released before using. Refer to Page 2 for releasing.		Step 4 For 3.0mm cable, you may make the opening bigger for inserting smoothly. Don't push hard to break it.						
	Step 1 Take off dust cap and clean the connector. Then, insert it to Fiber Checker (Patch Cord).* (Skip this if no Fiber Checker.)		Step 5 Insert the tube and fiber to the body.						
	Step 2 Wear boot. Then, wear tube. (No tube for 3.0mm & Flat Cable) <table><tr><td>Cable</td><td>Tube</td></tr><tr><td>250/900um</td><td>0.9</td></tr><tr><td>2.0mm</td><td>2.0</td></tr></table>	Cable	Tube	250/900um	0.9	2.0mm	2.0		Step 6 Push the fiber to the end and form a very small curve in the jaw. (With Fiber checker, please fine tune fiber until red light is weak.)
Cable	Tube								
250/900um	0.9								
2.0mm	2.0								
A. 2.0 mm/ 3.0 mm/ Flat Cable  B. 250/900um 	Step 3 After stripping fiber, please cleave the fiber as the length.		Step 7 Press both buttons on the body during the fiber is curving. *Make sure to push buttons to the end.						
	< Drawing > Position and direction for Kevlar.		Step 8 Wear the boot to half way. After cutting Kevlar, wear the boot to the end tightly.						

Quick Assembly Connector (No Tool) – 2.0mm/3.0mm/Flat Cable



User's Manual

Rev. 2011B

	<u>Step 9</u> Take off from Fiber Checker (Patch Cord) and wear the dust cap. (Skip this if no Fiber Checker.)		<u>Step 10</u> Wear the housing. Now the job is done.
---	--	--	--

- Patch cord on Step 1 is for easy operation.
- For best performance on Flat Cable, please use "Flat Cable only" type of Quick Assembly Connector.

B. Release Methods

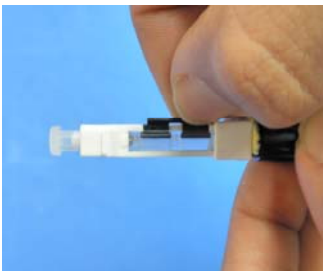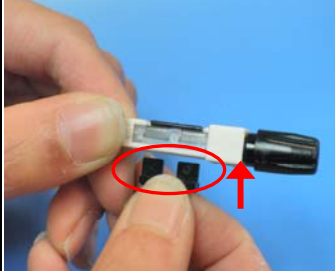	< Method A > Use nail to release the buttons.		< Method B > Use "Release Key" to unlock the buttons. *The key is free to customers.
--	--	---	--

C. Contact Information

If you have any question for our products, please contact us. You can also find the "Training Video" on our web.

BroField Technology Inc.

NO, 6, LN 40, SEC 1. CHU-MEI RD, CHUTUNG,

HSINCHU, 310 TAIWAN

E-mail: info@brofield.com

Web: www.brofield.com

TEL +886-3-5833517 FAX +886-3-5827018

BroField Technology Inc.

6, Ln 40, Sec 1, Chu-Mei Road, ChuTung, HsinChu 310, Taiwan TEL +886-3-5833517 FAX +886-3-5827018

www.brofield.com info@brofield.com

Made in Taiwan